


Congratulations on your new Bintelli Beyond! Use this guide for quick access to information on use and care. Refer to your full user manuals for more detailed information!

Long Term Storage

- Charge the battery system to 80%
- Turn the “Tow/Run” switch to the “Tow” position.
- Remove the key and keep it in a safe place.
- Ensure each tire is inflated to 25psi.
- Ensure battery cable connections are secure and free of corrosion
- Clean the body, seats, battery box, and chassis.
- If storing outdoors, cover the vehicle with a storage cover.
- Monitor the battery connections charge state and cables for corrosion monthly.
- Press and hold battery power button for 5 seconds to turn off.

Safe Operation Instructions

Please make sure to observe the following safe operation instructions. Ensure you are familiar with all of the controls of the vehicle prior to operating. Prior to operating the vehicle, perform checks on the battery, tires, body/chassis, brakes, parking brake, and steering. To power on your Beyond, first ensure the battery is powered on and the tow run switch is in the “run” position. Then insert the ignition key and turn to on position

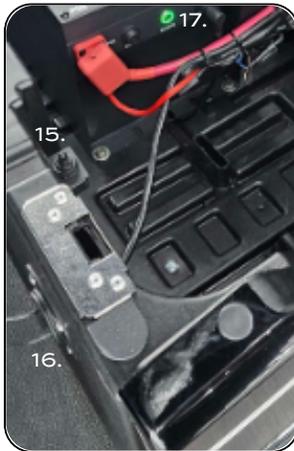

1. Combination switch, headlights, turn signals, horn
2. LCD Dashboard
3. Battery gauge (For lead acid powered Beyond)
4. Parking brake (Located on front seat pod on 6 seat and forward facing 4 seat models)
5. Brake pedal
6. Accelerator pedal

7. Ignition key switch
8. Locking glove box
9. Pre-wired accessory add-on switches
10. Telescoping steering lock
11. Wireless charging cubby
12. Diagnostic and programming port
13. 12V power port
14. USB charging port
15. Tow/run switch (Flip for towing and long term storage)
16. Charging Port
17. Battery Power Switch



1. Power button
2. Home button
3. Back button
4. Volume up
5. Volume down
6. Headlight indicator
7. High beam indicator
8. Brake fluid low indicator
9. Parking brake indicator
10. Foot brake indicator
11. Low battery indicator
12. Service Vehicle indicator
13. Battery percentage display
14. Drive amperage and regenerative braking display
15. Date and time display
16. Volume level indicator
17. Gear position indicator
18. Speedometer display

The Beyond charger is fully automatic. Once plugged in, it will begin the charging process and shut down when complete. Battery charge status during charging can be viewed by turning the cart on, connecting the Eco Battery app, or by LED status lights on the charger inside the battery compartment.

If your cart is not used for a period of time, the battery may power off to conserve state of charge. The power button on your battery is located on the side of the battery case. If the green ring in the button is illuminated, the battery is on. Press once to turn on, press and hold to turn off.

Congratulations on your new Bintelli Beyond, welcome to the family!